


Cyclops

User's Manual

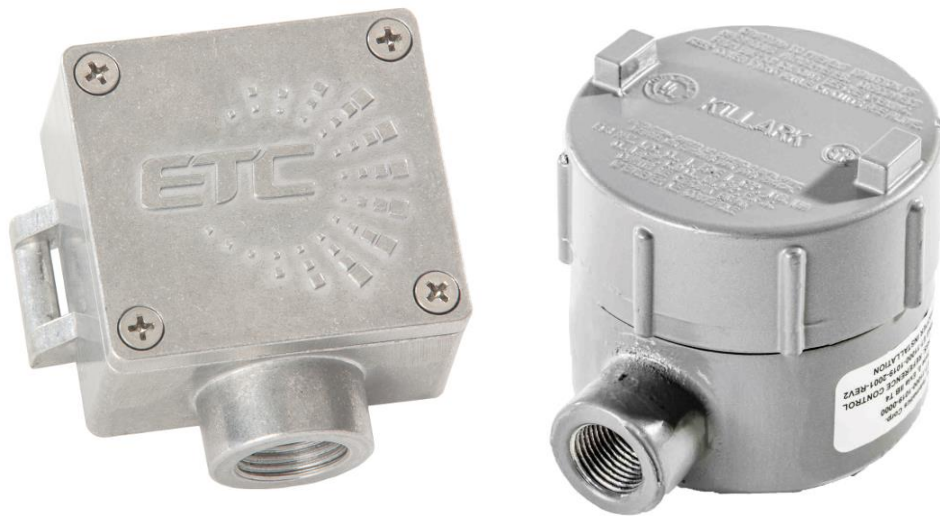

Revision 6.x.x
August 14, 2018

Contents

Background	6
Interface	6
Normal Operation	6
Controller Input Type	6
Communication	7
Sensitivity	8
Operating Modes	9
Normal	9
Self-Test	9
Full Debug	9
Raw Samples	9
Log Arrivals	9
Download Log	10
Hazardous Locations	10
Cyclops IS	10
Cyclops ExP	10
Cathodic Protection	11
Company Contact Information	11
Appendix A: Specifications	11

Installation Location: Class I, Division 1, Groups C, D or Class 1 Zone 0 Locations Only

Applicable to models ET-11000-1019-0000 and ET-11000-1019-0100.



WARNING – INTRINSICALLY SAFE WHEN CONNECTED PER DRAWING ET-11000-1019-2001 FOR ET-11000-1019-0000 AND DRAWING ET-11000-1019-2101 FOR ET-11000-1019-0100.

WARNING – SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.

WARNING – NO SERVICEABLE PARTS.

WARNING – AVOID STRIKING OR EXCESSIVE FRICTION ON THE EQUIPMENT SURFACE DUE TO IGNITION HAZARD.

WARNING – TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT POWER BEFORE OPENING.

WARNING – FINAL INSTALLATION SHALL BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, NFPA 70, AND THE CANADIAN ELECTRICAL CODE.

WARNING – USED CONDUCTORS MUST BE RATED FOR 85°C MINIMUM.



AVIS – L'ÉQUIPEMENT EST EN SÉCURITÉ INTRINSÈQUE QUAND IL EST BRANCHÉ SELON LE DESSIN ET-11000-1019-2001 POUR ET-11000-1019-0000 ET DESSIN ET-11000-1019-2101 POUR ET-11000-1019-0100.

AVIS – LA SUBSTITUTION DE COMPOSANTS PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

AVIS – PAS DE COMPOSANTS SERVICEABLES.

AVIS – ÉVITER DE FRAPPER OU FRICTION EXCESSIVE SUR LA SURFACE DE L'ÉQUIPEMENT EN RAISON DE RISQUES D'INFLAMMATION.

AVIS – POUR ÉVITER L'ALLUMAGE DES ATMOSPHÈRES INFLAMMABLES OU COMBUSTIBLES, COUPER LE COURANT AVANT OUVERTURE.

AVIS – INSTALLATION FINALE DEVRA SE FAIRE CONFORMÉMENT À NATIONAL ELECTRICAL CODE, NFPA 70, ET CANADIAN ELECTRICAL CODE.

AVIS – CÂBLAGE DOIT ÊTRE ÉVALUÉ À 85°C MINIMUM.

Installation Location: Class I, Division 2, Groups A, B, C, D or Non-Hazardous Locations Only

Applicable to models ET-11000-1019-0000 and ET-11000-1019-0100.



WARNING - DO NOT REMOVE, REPLACE OR DISCONNECT WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS OF FLAMMABLE SUBSTANCES.

WARNING - EXPLOSION HAZARD – SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

WARNING - THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS LOCATIONS ONLY.

WARNING - NO SERVICEABLE PARTS.

WARNING - IF EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, THE PROTECTION PROVIDED BY THE EQUIPMENT MAY BE IMPAIRED.

WARNING – FINAL INSTALLATION SHALL BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, NFPA 70, AND THE CANADIAN ELECTRICAL CODE.

WARNING – USED CONDUCTORS MUST BE RATED FOR 85°C MINIMUM.



AVIS – NE PAS ENLEVER, REMPLACER OU COUPER SI LE CIRCUIT EST SOUS TENSION À MOINS QUE LA RÉGION EST SAUF ET SANS SUBSTANCES INFLAMMABLES.

AVIS – RISQUE D'EXPLOSION – LA SUBSTITUTION DE COMPOSANTS PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION 2.

AVIS – L'ÉQUIPEMENT EST ADAPTÉ POUR UTILISATION DANS CLASS I, DIVISION 2, GROUPS A, B, C, D OU DANS DES RÉGIONS SAUFS.

AVIS – PAS DE COMPOSANTS SERVICEABLES.

AVIS – SI L'ÉQUIPEMENT N'EST PAS UTILISÉ TANT QU'AUX INSTRUCTIONS DU FABRICANT, LA PROTECTION PEUT ÊTRE RÉDUITE.

AVIS – INSTALLATION FINALE DEVRA SE FAIRE CONFORMÉMENT À NATIONAL ELECTRICAL CODE, NFPA 70, ET CANADIAN ELECTRICAL CODE.

AVIS – CÂBLAGE DOIT ÊTRE ÉVALUÉ À 85°C MINIMUM.

Installation Location: Class I, Division 1, Groups C, D or Class 1 Zone 1 Locations Only

Applicable to models ET-11000-1020-0000 and ET-11000-1020-0100.



WARNING – EXPLOSION PROOF WHEN CONNECTED PER DRAWING ET-11000-1020-2001 FOR ET-11000-1020-0000 AND DRAWING ET-11000-1020-2101 FOR ET-11000-1020-0100.

WARNING – SUBSTITUTION OF COMPONENTS MAY IMPAIR EXPLOSION PROOF RATING.

WARNING – NO SERVICEABLE PARTS.

WARNING – AVOID STRIKING OR EXCESSIVE FRICTION ON THE EQUIPMENT SURFACE DUE TO IGNITION HAZARD.

WARNING – TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT POWER BEFORE OPENING.

WARNING – FINAL INSTALLATION SHALL BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, NFPA 70, AND THE CANADIAN ELECTRICAL CODE.

WARNING – USED CONDUCTORS MUST BE RATED FOR 85°C MINIMUM.



AVIS – L'ÉQUIPEMENT EST ANTIDÉFLAGRANT QUAND IL EST BRANCHÉ SELON LE DESSIN ET-11000-1020-2001 POUR ET-11000-1020-0000 ET DESSIN ET-11000-1020-2101 POUR ET-11000-1020-0100.

AVIS – LA SUBSTITUTION DE COMPOSANTS PEUT COMPROMETTRE LA SÉCURITÉ ANTIDÉFLAGRANTE.

AVIS – PAS DE COMPOSANTS SERVICEABLES.

AVIS – ÉVITER DE FRAPPER OU FRICTION EXCESSIVE SUR LA SURFACE DE L'ÉQUIPEMENT EN RAISON DE RISQUES D'INFLAMMATION.

AVIS – POUR ÉVITER L'ALLUMAGE DES ATMOSPHÈRES INFLAMMABLES OU COMBUSTIBLES, COUPER LE COURANT AVANT OUVERTURE.

AVIS – INSTALLATION FINALE DEVRA SE FAIRE CONFORMÉMENT À NATIONAL ELECTRICAL CODE, NFPA 70, ET CANADIAN ELECTRICAL CODE.

AVIS – CÂBLAGE DOIT ÊTRE ÉVALUÉ À 85°C MINIMUM.

Background

The Cyclops is a revolutionary new magnetic field sensor that can detect the movement of a ferrous object. It is sensitive enough to use with non-ferrous objects by detecting the movement of other ferrous system components. It features a rugged aluminum case with support for a hose clamp, a ½" NPT strain relief port, and captive screws in the lid. The adjustable sensitivity dial allows the operator to reduce sensitivity to eliminate false detections in noisy environments or increase sensitivity for hard to detect and non-ferrous objects.

Cyclops is the only sensor on the market that features a communication mode where you can upgrade the firmware, access more sensitivity settings, and see real time readings to troubleshoot hard to detect situations. This microprocessor based design incorporates noise reducing filters and also controls the output switch to give a clean, 5 second minimum switch closure that is easy for any controller to detect.

Interface

Normal Operation

Each Cyclops sensor is factory programmed to operate as dry contact that closes when an arrival occurs. The physical wiring and descriptions of the connections are shown below:

COM – The common (COM) is connected to ground. When an arrival occurs, current will flow through the signal (SIG) connection to ground. There is 100 Ohms of impedance in this path to limit the current.

SIG – Connect this to the input signal on your controller that supports a dry contact. Please see below for voltage based inputs.

PWR – Provides power for the sensor to operate. It requires a minimum of 4.5 V DC and is rated to safely take a voltage up to 28 V DC. This power must be available any time the sensor is expected to detect an arrival as there is no internal battery.

Controller Input Type

The Cyclops has been designed with an open collector field effect transistor (FET) so that it acts as a dry contact, which ensures that it can be connected directly to most controllers. Most magnetic sensors available on the market are designed to act as a dry contact, so the Cyclops can easily be used as a replacement sensor for any system. A dry contact input on a controller features as internal pull up resistor. When the contact is open, the internal input will read the system voltage. When the contact closes, the input will now read ground.

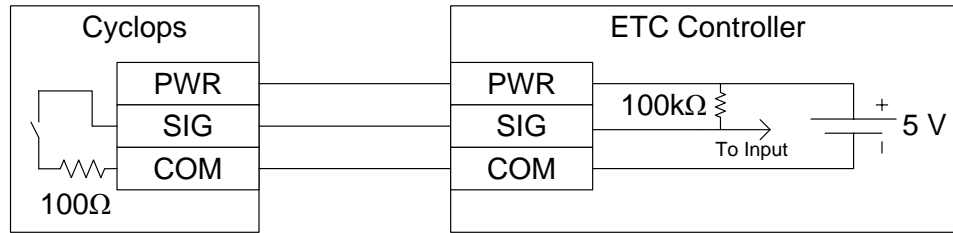


Figure 1 - Typical Dry Contact Interface

When using a programmable logic controller (PLC) or other application specific controller (i.e. Flow Computer) it is possible that you need to connect to a voltage based input. This type of input is expecting to see a change in the voltage and is not directly compatible with the Cyclops because it closes a switch instead of sending back a voltage. The difference is that there is no internal pull up resistor provided by these controllers, so an external pull up resistor must be connected. Connecting R1 resistor between the power and input on the controller will allow these systems to connect to a Cyclops. Check Table1 for suggested resistor values based on voltage input.

When the Cyclops switch is open, the input will see the voltage coming from the power connection. When the switch closes, the input will be pulled to ground. This difference in voltage can then be detected.

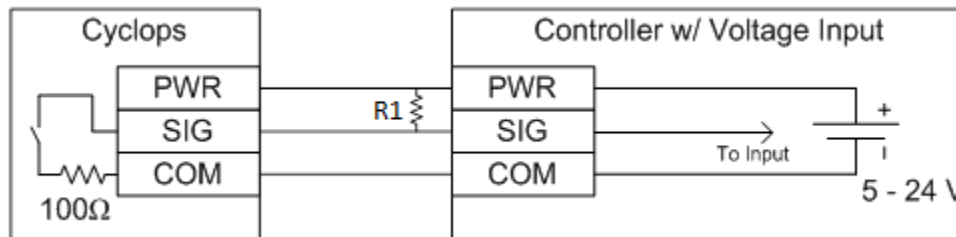


Figure 2 - External Resistor for Voltage Input

R1	Supply Voltages
10K Ohm	12V
10K Ohm	24V

Table 1 - External Resistor Values (R1) and Supply Voltages

Communication

The communication interface is basic serial interface which acts as one half of an RS-485 interface. It is multiplexed with the SIG connection. Since the other half of the RS-485 signal is not present and there is no internal RS-485 transceiver, this interface may not work with all RS-485 devices. Typically any RS-485 device must have the other half of the signal tied to power through a pull up resistor. ETC does sell devices and cables that are compatible with this interface.

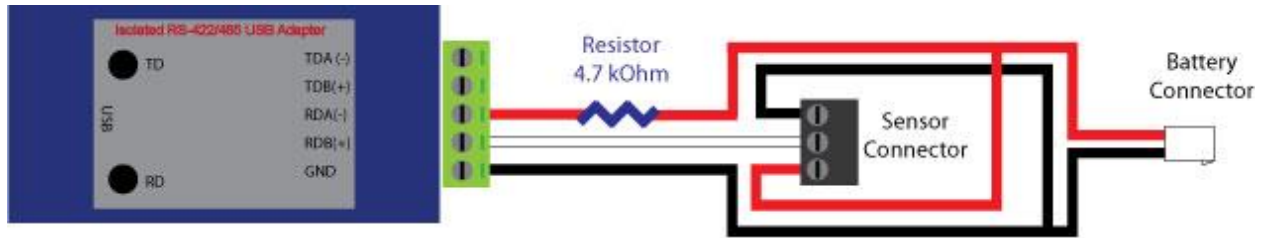


Figure 3 - Programming Adapter with Cyclops Cable

The above is an example of an adapter and a specialized cable that can be used to make this connection. Please note that this is not considered safe for use when connecting to the Cyclops in a hazardous location. ETC can provide an alternate solution that is safe to use in a hazardous location.

When the sensitivity dial is set to 0, Cyclops enters a mode where it listens for external commands on the SIG line. Using ETC Vision, you can program new firmware, change the operating mode, and adjust the sensitivity.

Sensitivity

The sensitivity dial does not change the signal in any way. It is simply an interface to allow the operator to adjust the threshold at which the switch will be closed. By default, the switch is set to 4, which is the middle of the range. The higher the number, the more sensitivity or lower the threshold. When set to 0, the Cyclops enters the communication mode, does not take magnetic readings, and does not operate the switch.

The magnetic sensor has an incredible amount of sensitivity, more than is needed for sensing any material type. To prevent false detections the maximum sensitivity has been limited by default. Setting 7 has a default detection threshold of 25 counts, even though it could go as low as 1. Using the communication mode, the detection threshold for setting 7 can be adjusted to make the sensor more or less sensitive. Because there is some noise in the readings, the threshold can only be set as low as 10. The threshold for each sensitivity dial setting is automatically calculated by doubling the threshold from the next most sensitive setting. The net result is that each dial setting is twice as sensitive as the previous setting.

The Table2 below highlights the relationship between sensitivity setting and detection threshold:

Setting	Threshold	Default Value
7	T	25
6	T x 2	50
5	T x 4	100
4	T x 8	200
3	T x 16	400
2	T x 32	800
1	T x 64	1600

Table 2 - Sensitivity Setting and Detection Threshold

Operating Modes

There are several operating modes that can be entered while the sensitivity dial is in position 0. The sensor will not start operating in a given mode until the sensitivity dial is set to a non-zero position. Before connecting the Cyclops to a controller, the mode must be set to Normal. If the mode is not set to Normal, the detection algorithm will not run and data that is being sent out the SIG connection will trip the controller.

Normal

This is the mode that each sensor is shipped in. When the sensitivity dial is set to any number other than 0, the sensor will take magnetic readings, calculate a baseline and compare the current reading to see if it has surpassed the threshold. When the threshold is exceeded, the switch is closed. The switch will remain closed for a minimum of 5 seconds. Any time that the threshold is exceeded, the timer is restarted. This means that as long as movement of a ferrous object continues in front of the sensor, the switch will remain closed.

Note: Since the baseline average is continually updated, a static object will eventually cause the switch to open since the reading will no longer exceed the threshold.

Self-Test

This mode will automatically run a current loop under the magnetic sensor, generating a magnetic field. The test will cycle through a series of different levels of current so that a change can be seen in the readings. A swing of at least 4000 counts between the minimum and maximum is considered acceptable. Run a capture in ETC Vision to see the real time readings during the self-test.

Full Debug

This mode will run just like the normal mode, but instead of controlling the switch, the SIG wire is used to stream live data to ETC Vision. This data includes the current readings, baseline, and current switch position. Run a capture in ETC Vision to see the real time stream of these values.

Raw Samples

The Raw Samples mode is similar to the Full Debug mode. It will take magnetic readings and stream data that is captured by ETC Vision. The difference is that no filtering is applied to the readings, no baseline is calculated, and the switch position is not determined, nor is it transmitted out. This mode essentially eliminates all internal algorithms to give an accurate picture of the readings coming from the magnetic sensor.

Log Arrivals

Log Arrivals tells the sensor to operate in normal mode, but to record some debug information when an arrival is detected. There is a very limited amount of space, so the number of log entries and amount of information stored per arrival is minimal.

Download Log

This mode will download the information that was captured when in Log Arrivals mode. ETC Vision is setup to set the sensor into this mode and then capture and record the information as it is transmitted from Cyclops.

Hazardous Locations

There are two models of Cyclops available, each with its own enclosure and corresponding hazardous locations certification. Both products are internally identical, so they are electrically connected, adjusted, and programmed in the same manner.

Cyclops IS

The Cyclops IS has been tested and approved as intrinsically safe for use in the most hazardous locations. When used with an intrinsically safe controller in the same hazardous locations area it can be connected directly without any other electrical barrier.

The following is the CSA Certification for Canada and the US:

Class I, Division 1, Groups C and D; Ex ia IIB T4

Class I, Zone 0, AEx ia IIB T4

Class I, Division 2, Groups A, B, C and D T4

Class I, Zone 2, Group IIC

For installation of ET-11000-1019-0000, please refer to Installation Guide ET-11000-1019-2005. For installation of ET-11000-1019-0100, please refer to Installation Guide ET-11000-1019-2105.

When connecting to a controller that is rated for a less hazardous area (i.e. a Class I Div 2 PLC/RTU), and intrinsic safety barrier must be used. This barrier ensures that the higher currents and voltages allowed in one area are not transmitted to the more hazardous location under failure conditions.

Cyclops ExP

The Cyclops ExP has been tested and approved as explosion proof. If an unsafe voltage or current is transmitted to the sensor under failure conditions, any resultant explosion will be contained within the device.

The following is the CSA Certification for Canada and the US:

Class I, Division 1, Groups C and D; Ex d IIB T4

Class I, Zone 1, AEx d IIB T4

For installation of ET-11000-1020-0000, please refer to Installation Guide ET-11000-1020-2005. For installation of ET-11000-1020-0100, please refer to Installation Guide ET-11000-1020-2105.

The benefit of the Cyclops ExP is that it can be connected directly to a controller that is rated for a less hazardous area (i.e. a Class I Div 2 PLC/RTU). The connector and wiring used must adhere to explosion proof standards, but the added complexity and expense associated with an intrinsic safety barrier can be eliminated.

Cathodic Protection

A common problem with magnetic sensors is that they often become an electrical path between the well and the controller. Often, high voltages associated with cathodic protection can leak back through the sensor to the controller, causing erratic behavior or permanent damage.

The Cyclops has been designed such that its internal circuitry does not come in contact with the case. This means that even if the case comes in contact with a surface that has a stray voltage; it will not be transmitted back through the wiring to the controller.

Please do keep in mind that any shielding on the cable that is connected to the case of the Cyclops will act as a path for any stray voltage to travel.

Company Contact Information

Extreme Telematics Corp.

5925 12th Street SE, Bay 14
Calgary, Alberta, Canada
T2H 2M3
Tel. +1-403-290-6300

Appendix A: Specifications

Electrical

Supply Voltage	6 V DC – 24 V DC
Current Draw	5mA max
Switch Impedance	100 ohms

Environmental

Operating Temperature	-40 to +70 °C (-40 to +158 °F)
Storage Temperature	-40 to +125 °C (-40 to +257 °F)
Operating Altitude	2000 meters max

Usage	Suitable for indoor or outdoor use
Relative Humidity	90% max and non-condensing (or equivalent)
Overvoltage Category	1
Pollution Degree	2