



THE PIT BOSS

QUICK INSTALL GUIDE

Step 1: Wire Switches/Sensors

- Arrival Sensor uses *DI 1* connections.
- 3 Wire uses *DO 1 Signal* for power
- Line Pressure
- Switch uses *DI 2* connections.
 - Sensor uses *AI 1* connections.
- Casing Pressure
- Switch uses *DI 3* connections.
 - Sensor uses *AI 2* connections.
- Flow Differential Pressure
- Switch uses *DI 4* connections.
 - Sensor uses *AI 2* connections.

Step 2: Connect Battery/Solar Panel

Insert the 4 position battery plug
 Insert the 4 position solar panel plug

! The battery must be plugged in before the solar panel.

Step 3: Set up Security

- Press then to enter the **System** menu.
- Press to start editing.
 Enter the default installer ID.
- Press until you see the Operator ID screen.
- Press .
 Set the Operator ID.
- Press .
 Set the Installer ID.

Step 4: Set Date/Time

- Press then to enter the **Set Date/Time** menu.
- Press and adjust the Date.
- Press and adjust the Time.
- Press to change Daylight savings time option.

Step 5: Configure Installation

- Press then to enter the **Install Setup** menu.
- Press to confirm a new install.
- Press to stop the controller.
- Press to adjust the amount of time to stop the controller for.
- Press to scroll through each setup screen.
- Press to adjust any specific setting.

Step 6: Configure Modbus (Optional)

- Press then to enter the **Modbus Setup** menu.
- Press to scroll through each setting.
- Press to adjust any specific setting.
 Configure each setting (Station ID, Protocol, Baud Rate, etc...) to match the settings used on a given network.

Step 9: Configure Timers (Optional)

- Timers should have been set during Installation. Use this method to change them.
- Press then to enter the **Adjust Settings** menu.
- Press to scroll through each timer and alarm setting screen.
- Press to adjust any specific setting.

Hot Keys

A variety of hot keys are provided to simplify the basic controller operations.

- Close the well. Return to the status screen.
- Open the well. Return to the status screen.
- Return to the status screen.
- View History (Cycle Log, Daily Production, Total Production, Plunger Stats).
- View the menus.
- Confirm an action or move down through the menu.

